



Hot Chocolate Wallet Tutorial

by Everything Pudding

You Will Need:

1 Fabric Quarter

Lightweight Fusible Interfacing

1 Snap (your preferred type)

Regular Sewing Supplies

Make It:

1. Wash & Preshrink Fabric
2. Iron
3. Cut fabric to make a 10" by 22" rectangle. Cut out tabs (4 from fabric and 4 from interfacing) using the template at the end of the tutorial.




4. Fuse interfacing to wrong side of fabric for each of the 4 tabs.



5. Pin 2 tabs right sides together and sew using a 1/4" seam. Do this for both sets of tabs.



6. On each set of tabs notch the curves (this will make it lie flatter once you've turned them).

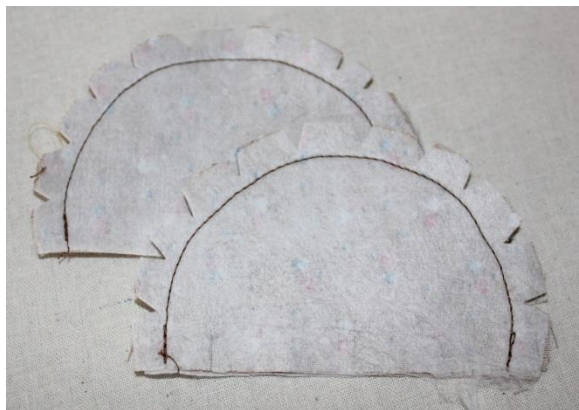

7. Turn right side out and press. Lay your tabs aside, you're done with them for now.



8. Taking your large fabric piece, fold long side in half with right sides together. Pin.



9. Sew up side with $\frac{1}{4}$ " seam allowance. Press seam open and place in the middle (~5 $\frac{3}{8}$ " inches from each side)



10. Sandwich a tab between the two layers $\frac{3}{8}$ " from the middle seam. Line up the edges. Do this for the other tab directly across.



11. Pin the sides leaving a 2 ½” opening on one side for turning. Refer to the picture below for placement clarification.



12. Sew a 3/8” seam up both sides, leaving the 2 ½” opening. Turn right side out and press.



13. Fold up $1\frac{3}{4}$ " on both sides, press, and pin.



14. Sew a $\frac{1}{8}$ " seam around all four sides. This will close the opening you used to turn it inside out.



15. Pin a line down the middle of the piece dividing the pockets in two. Sew along this line.



16. Insert snap using your preferred method. Press and fold. You're done!



Hot Chocolate Wallet Tab Template

